

Manual Bypass BP/2 for MegaLine

3 108 63



1. GENERAL FEATURES

The Manual maintenance bypass BP/2 allows you to remove the UPS from its original installation without interrupting the power supply to the load, making it possible to carry out the operations that need to be performed with the UPS switched off:

- Maintenance
- Upgrade
- Power expansion
- Check fault

It replaces the rear connector and can be easily removed from the UPS.

Bypass BP/1 must be used with MegaLine 5000/2 – 6250/2 – 7500/2 – 8750/2 – 10000/2.

2. FUNCTIONAL DIAGRAM

